

Multi-Colored Rotating Light

OWNER'S MANUAL — Please read before using this equipment.

The Multi-Colored Rotating Light comes with colorful lenses that shine beams of light around the room as the light rotates. It is great for creating lighting effects at a dance, or a party, or in your living room.

Your light is ETL listed to UL standards.

INSTALLATION

You can mount the rotating light on a desk-top or on the ceiling. Before you mount the light, select a location that is:

- Out of the way of normal activities, but within arm's reach, so you can operate it easily.
- Sturdy enough to withstand the light's weight.
- Close enough to an AC outlet to use the attached 6-foot (1.83-meter) power cord.

Desk Mounting

You can place the rotating light on any level surface such as a desktop.


Ceiling Mounting

You need a ceiling hook and mounting hardware (not supplied) that will anchor securely into your ceiling structure and will support about 2.5 pounds.

Consult your local hardware store for the appropriate type of mounting hardware to use for your ceiling type.


Once the hook is secure, lift the recessed wire bracket on the bottom of the light's base

then slip it over the ceiling hook. Be sure to route the AC power cord away from the unit and other objects.

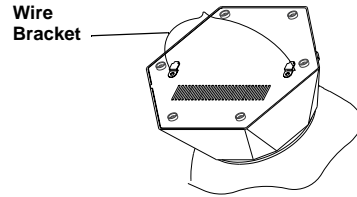

OPERATION

1. Plug the AC power cord into a standard AC outlet. The power cord has a polarized plug that is designed to fit into the AC outlet only one way. If the plug does not easily fit into the outlet, do not force it. Simply turn it over and try again.
2. To turn the rotating light on or off, push the power switch located on the base of the light. The ball lights and starts to rotate.

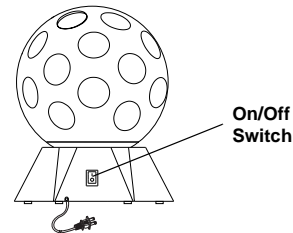

Unplug the light from the AC outlet when not in use.

CARE

Keep the light dry; if it gets wet, wipe it dry immediately. Use and store the light only in

normal temperature environments. Handle the light carefully; do not drop it. Keep the light away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the light's internal components can cause a malfunction and invalidate its warranty. If your light is not performing as it should, take it to your local RadioShack store for assistance.

Replacing the Bulb

Warnings:

- Use only a 120V/50W halogen light bulb of the required size. Using a bulb that

does not meet specs might damage the rotating light.

- Before replacing the bulb, unplug the rotating light. Be sure the bulb has cooled down.
1. Use a pointed object such as a screwdriver to press the tabs located at the bottom of the plastic bulb cover and remove the cover from the base.
 2. Remove the bulb by pulling it straight out from the white holder and replace it with a 120 V/50W bulb.
 3. Replace the cover.

SPECIFICATIONS

Power Requirement.....	AC 120V 60Hz
Light Source	120V/50W Halogen Light Bulb (Included)
Light Ball Turning Speed	18RPM
Power Cord Length	6 Feet (1.83 m)
Diameter of Light Cover	8 Inches (203.2 mm)
Dimensions (HWD)	10 ⁵ / ₈ x 8 ¹ / ₄ x 8 ¹ / ₄ Inches (270 x 210 x 210 mm)
Weight	2.2 lb (1 Kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up, service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

42-3068
06A00
Printed in China